

**INSTRUCTION MANUAL  
PRO-RGB-W-R01**



**RGB & RGBW remote control**

**Key features**


- Brightness and colour adjustment in 1 zone / area
- Push button RGBW remote control
- 10 built-in modes

**Technical characteristics**


**Remote control**

Ref.	Operating Voltage	Operating Frequency	Dimensions	Observations
9955909	4,5 VDC	434 MHz / 868 MHz	120 x 48 x 20 mm.	Wireless RF

**Dimensions**

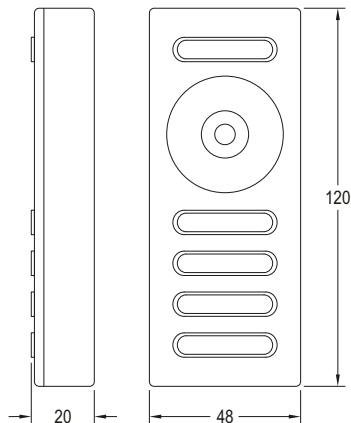

**Function overview**

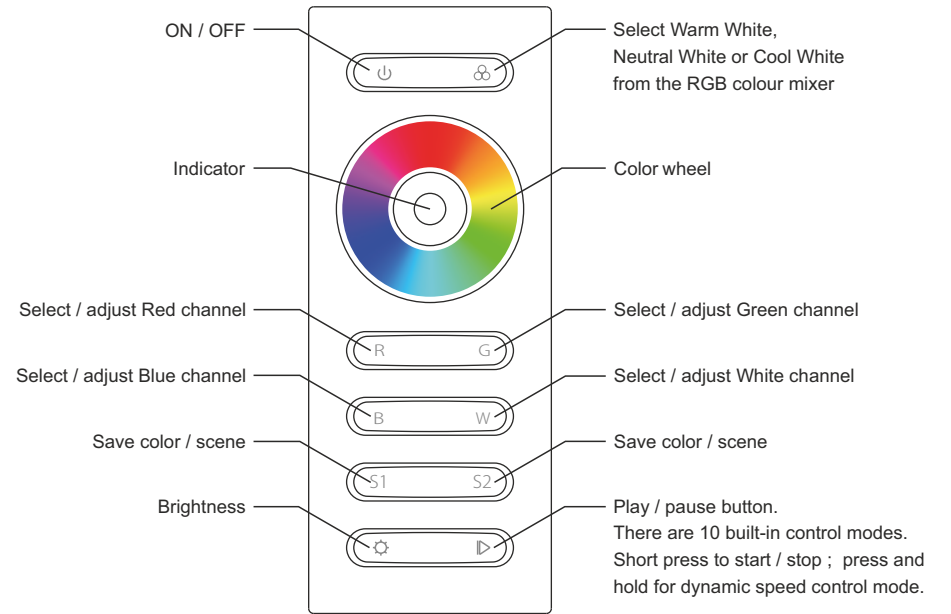

**Operation**

**1. Pairing**

- Connect the device according to the wiring diagram.
- Activate the remote control by pressing the ON/OFF button.
- Press the RF Code Key on the receiver.
- Touch the colour wheel.
- The LED light will flash to confirm pairing has been successful.

**2. Cancel pairing**

- Activate the remote control by pressing the ON/OFF button.
- Hold the RF Code Key on the receiver down for more than 5 seconds until the LED light flashes. Pairing is cancelled.

**Safety warnings**

- 1) This product must be installed and serviced by qualified personnel.
- 2) IP20. Protect from sun and rain. For outdoor installations, make sure it is housed inside a waterproof enclosure.
- 3) Always ensure the device is installed in a properly ventilated area to avoid overheating.
- 4) Make sure that the output voltage of any LED power supply used complies with the working voltage of the product.
- 5) Never connect any cables while the power is on. To avoid short circuits, check the connections are correct before switching on.
- 6) Check that cables are securely attached to the terminal blocks.
- 7) Please contact your supplier for updated information.